

Ulydor Systems

S1 - One Button Door Phone

Quick Installation Guide

Before starting to program the S1 door phone it is important to determine the following:

- The extension number that has been assigned to the S1 door phone
- The extension or hunt group number that the S1 door phone is to call when the button is pressed
 - The unit can be programmed to call two different numbers allowing the use of the day and night mode feature available on the unit.
 - If you do not intend to use the day and night mode feature then it is recommended that both the day and night modes are both programmed with the same extension or hunt group number

After the Ulydor S1 door phone has been connected to the PBX, call it using the assigned extension number from any telephone. When the S1 door phone answers, key **#0000** and wait for the tones (**beep, beep, pause – This will repeat continuously**), indicating that you are in programming mode.

Now enter the following using the telephone keypad:

- Enter **101** followed by the extension or hunt group number for day mode
- Wait for Tone – Single beep
- Enter **201** followed by the extension or hunt group number for night mode
- Wait for Tone – Single beep
- Enter **9** the door phone hangs up

You have now successfully programmed the unit to call the desired numbers. When a call is received from the door phone it is possible to release the door locking mechanism by entering **55** on your phone keypad.



- One Button Door Phone
- Two Wire Analogue
- 151mm x 157mm x 80mm
- Two Relays
- Can Operate Without Power Supply

Day and Night Modes

To put the system into night mode do the following:

- Call the door phone and on answer enter **10** and wait for the single tone before hanging up

To put the system into day mode do the following:

- Call the door phone and on answer enter **11** and wait for the single tone before hanging up

For further programming options please see the Ulydor manual supplied on the CD with this unit.