

Ulydor Systems

S4 - Two Button Door Phone with Access Control Keypad

Quick Installation Guide

Before starting to program the S4 door phone it is important to determine the following:

- The extension number that has been assigned to the S4 door phone
- The extension or hunt group numbers that the S4 door phone is to call when each button is pressed
 - The unit can be programmed so that each button can call two different numbers allowing the use of the day and night mode feature available on the unit.
 - If you do not intend to use the day and night mode feature then it is recommended that both the day and night modes are both programmed with the same extension or hunt group number for each button
 - The code to allow access using the keypad

After the Ulydor S4 door phone has been connected to the PBX, call it using the assigned extension number from any telephone. When the S4 door phone answers, key **#0000** and wait for the tones (**beep, beep, pause – This will repeat continuously**), indicating that you are in programming mode.

Now enter the following using the telephone keypad:

- Enter **101** followed by the extension or hunt group number for day mode on button 1 (**01** is the number of the button that you are programming)
- Wait for Tone – Single beep
- Enter **201** followed by the extension or hunt group number for night mode on button 1 (**01** is the number of the button that you are programming)
- Wait for Tone – Single beep
- Repeat the above 4 steps to program button 2, but instead of **01** enter **02** (i.e. **102/202**)
- Enter **481** and Wait for Tone – Single beep



- Enter **321** followed by the code that will allow the door to open.
- Wait for Tone – Single beep
- Enter **9** the door phone hangs up

You have now successfully programmed the unit to call the desired numbers. When a call is received from the door phone it is possible to release the door locking mechanism by entering **55** on your phone keypad.

To open the door from the Door Phone Keypad, press the **key button** followed by the code programmed earlier.

Day and Night Modes

To put the system into night mode do the following:

- Call the door phone and on answer enter **10** and wait for the single tone before hanging up

To put the system into day mode do the following:

- Call the door phone and on answer enter **11** and wait for the single tone before hanging